



FROM 2012

Hyundai H350



BEFORE PROCEEDING, PLEASE CHECK THE PRODUCT TECHNICAL INFORMATION

REAR DOOR




Remove the panels from both rear doors. Apply the drilling template.



The position indicated is not binding, and does not exclude other possible position.

The longitudinal axis of the outer-shell is at 69 cm from the bottom edge of the tailgate. Align the vertical axis (dash line point) to the edge of the tailgate. Mark the 4 holes of 9mm extremes.*

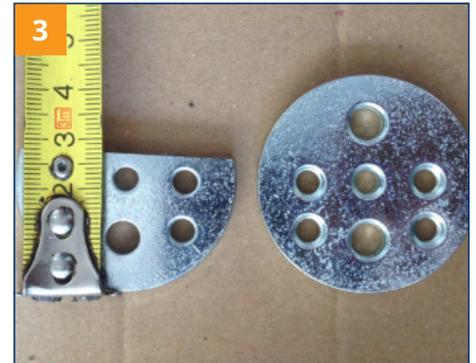


Cut the striker plate as shown next (approx. 3cm). In this way the same will fit perfectly into the existing internal site. Check that there is no interference with the standard lock. **Proceed with the steps according to the product technical information.**

REAR DOOR



Pay attention to house the armor counterplate inside the double inner sheet in order to avoid the withdrawal of the external sheet (see photo beside).

SIDE DOOR

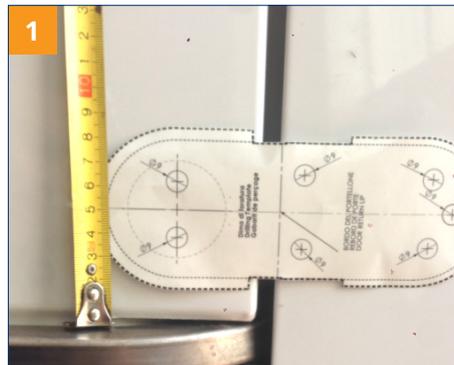

Remove the panels from the sliding door and the side part. Apply the drilling template. In particular, the longitudinal axis of the body lock is at 5 cm from the upper side of the sliding side. Mark holes 9 mm.*



The position indicated is not binding, and does not exclude other possible position.

For the fitting of the hook/striker, it is necessary to create an access through the structure of the column. One possible solution is to create two adjacent holes and join them. Cutting the counter-plate as in the case of the rear door and using a stud to support access and positioning is easier.* **Proceed with the steps according to the product technical information.**

*Pay attention to the holes on the extreme edge; before drilling, make sure that the head of the M8 pin is contained in the edge. Pay attention to the hole for the passage of the emergency cable: pierce only the external sheet to allow the insertion of the cable in the door.