



FROM 2014 - PRESENT

IVECO DAILY



BEFORE PROCEEDING, PLEASE CHECK THE PRODUCT TECHNICAL INFORMATION

REAR DOOR



Remove the paneling of the two doors of the rear door.




Then proceed with the application of the template and the drilling. In particular, the longitudinal axis of the shell is 5 cm above the upper edge of the convex surface of the door (see dotted line in the photo) at the flat surface. Drill 9 mm holes.\*

SIDE DOOR



Remove the paneling from the door. Then proceed with the application of the template and the drilling.

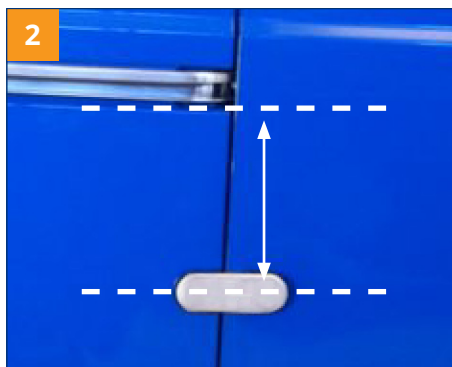

In particular, the longitudinal axis of the shell is 28 mm from the lower edge of the slot of the sliding guide (see photo). Mark the 9 mm holes.\* *Proceed with the steps according to the generic installation procedure.*

\*Pay attention to the holes on the extreme edge; before drilling, make sure that the head of the M8 pin is contained in the edge. Pay attention to the hole for the passage of the emergency cable: pierce only the external sheet to allow the insertion of the cable in the door.